

## RXP 212: Pneumatic operating unit

### How energy efficiency is improved

Permits fume cupboards to be switched off manually in order to save energy.

### Areas of application


Monitoring of fume cupboards in combination with an air-volume controller, type RLP 100.

### Features

- Alarm function
- Visual monitoring of deviation
- Setpoint of front sash opening is fed to the controller by the TUP 224F901
- Comparison with actual value
- Setpoint is specified to controller via the manual switch on the operating unit
- Aluminium front panel with manual switch, mute button and pressure gauge
- Suitable for panel or wall mounting
- Compressed-air connection on plug nipple for flexible plastic hose (dia. = 4 mm)



T07768

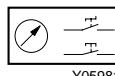

Y05981

### Technical description

- Pressure gauge in accuracy class 1.6
- Manual switch for selecting between manual and automatic operation
- Mute button for acknowledging the acoustic alarm

Type	Fitting	Position of manual switch $\dot{V}_{\max}$	Positions	Weight kg
RXP 212 F001	vertically	emergency mode; damper fully open	2	0,2
RXP 212 F002	horizontally	emergency mode; damper fully open	2	0,2
RXP 212 F003	vertically	100% air volume, controlled	4	0,2
RXP 212 F004	horizontally	100% air volume, controlled	4	0,2

Manual switch and Mute button:		Pressure gauge:	
Nominal flow $Q_N$	(1,0 bar → 0)	3,0 m <sup>3</sup> <sub>n</sub> /h	Error Class 1,6
Max. leakage rate	(2,5 bar → 0)	1,2 l <sub>n</sub> /h	Max. operating pressure 1,4 bar
Max. pressure/differential pressure		2,5 bar	
Permissible ambient temp.		0...55 °C	Dimension drawing M03226
Wiring diagram	F001/F002 F003/F004	A04869 A08539	Fitting instructions MV 505314

### Accessories

**0297780 001\*** Housing, including two screws, for wall mounting; not tested for explosion-free zones.

\*) Dimension drawing or wiring diagram are available under the same number

For regulations on the quality of the air supply, especially at low ambient temperatures, see Section 60

### Operation

Together with the RLP 100 F123 controller and the RXP 210 alarm unit, the operating unit monitors the air volume in the fume cupboard. The amount that the fume cupboard's sash is open is fed as a setpoint to the relevant VAV controller (RLP 100 F123) and compared to the actual value of the air volume (F001, F002). On the F003/F004 models, the amount that the fume cupboard's sash is open is fed as a setpoint (via the operating unit's manual switch) to the VAV controller and compared to the actual value of the air volume.

Any deviation is indicated visually (in accordance with DIN 12924) on the RXP 212. In the event of a malfunction, an acoustic signal is emitted by the RXP 210 alarm unit. It can be stopped by pressing the 'Mute' button on the operating unit for about two seconds (closes connector 6 on the alarm unit).

**Pressure gauge** For indicating the offset in air volume ( $\Delta \dot{V}$ ).

Green sector: actual value = setpoint.

Red sector: the actual value is smaller or larger than the setpoint.

**Manual switch** RXP 212 F001, F002: with  $\dot{V}_{\max}$  position (emergency mode; damper fully open) and  $\odot$  position (control mode).  
RXP 212 F003, F004: with  $\dot{V}_{\min}$  position (minimum air volume, controlled),  $\odot$  position (control mode),  $\dot{V}_{\max}$  position (100% air volume, controlled), and  $\odot$  position (control mode).

**Mute button**  to suppress the alarm.


### Technical information

Technical Manual VAV 7 000 621 001



### Additional information on accessory

**0297780 001** Housing of black glass-fibre-reinforced thermoplastic. Due to the suitable choice of materials, the surface resistance is not higher than  $10^9 \Omega$ . When used in compliance with the guidelines, and when carrying out servicing and cleaning, no electrostatic charges occur. The housing complies with the EN 50014 standard.

### Connection diagram

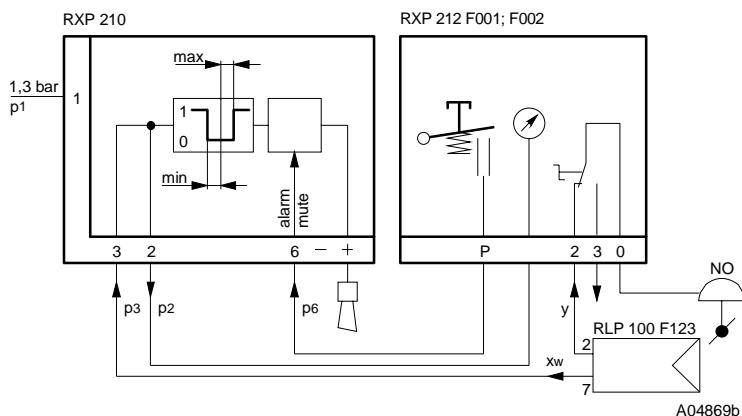


### Accessories

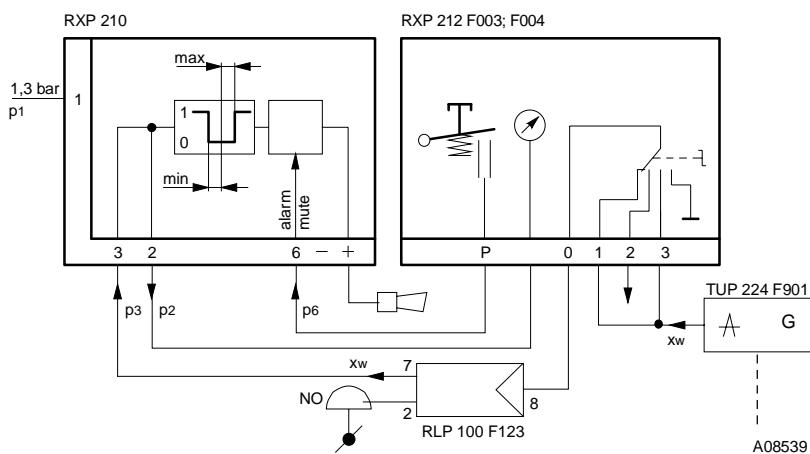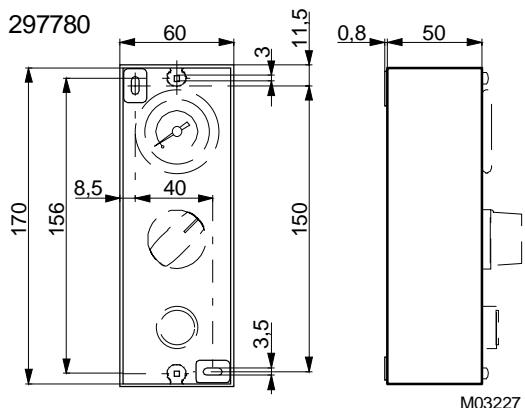


### Variants

RXP 212 F001

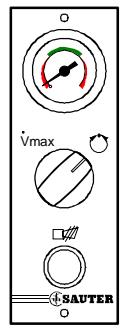


B08675

RXP 212 F003

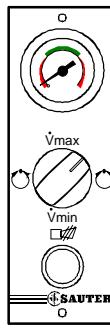


B08677

RXP 212 F002

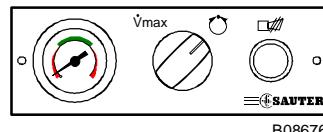


B08676

RXP 212 F004

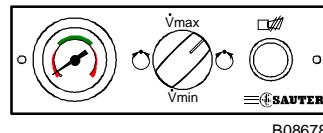

B08678


### Dimension drawing

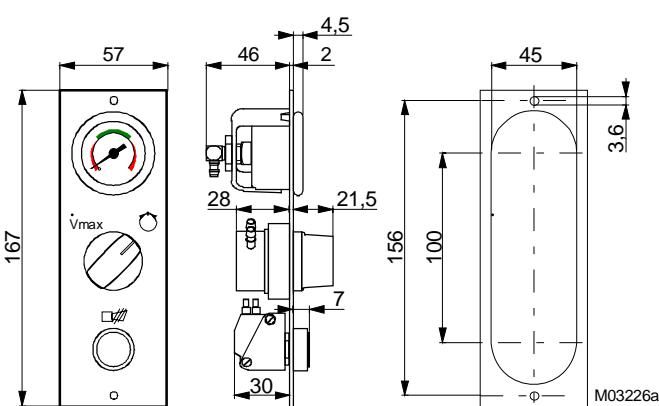

### Example of use

Volume of return air controlled in proportion to the opening of the fume cupboard's sliding door; with sash sensor, alarm unit and operating unit; taking the room temperature into account.

Printed in Switzerland

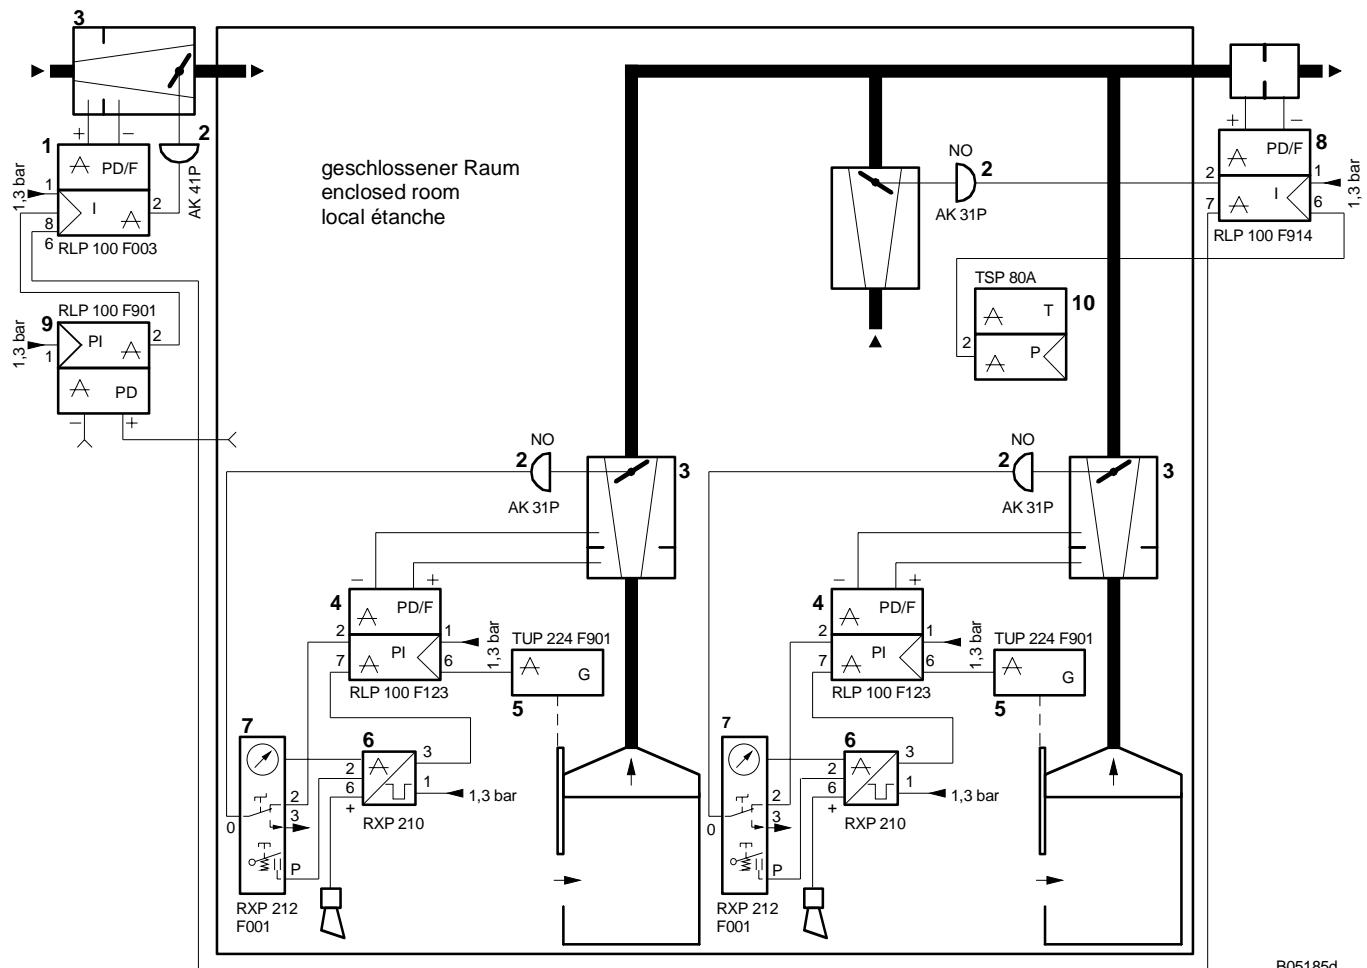


B05185d

### Variant: RLP 100 F123

with: alarm unit RXP 210 and  
operating unit RXP 212 F003  
(manual switch Aut- $\dot{V}_{\min}$ -Aut- $\dot{V}_{\max}$ )

- 
- |    |  |
|----|--|
| 1  | Volume-flow controller                       |
| 2  | Damper drive, NO                             |
| 3  | Reducing box                                 |
| 4  | VAV return-air controller for fume cupboards |
| 5  | Sash sensor                                  |
| 6  | Alarm unit                                   |
| 7  | Operating unit                               |
| 8  | Room RA controller for aggressive gases      |
| 9  | Pressure controller                          |
| 10 | Room-temperature controller                  |
| NO | Normally open (drucklos offen)               |
- 

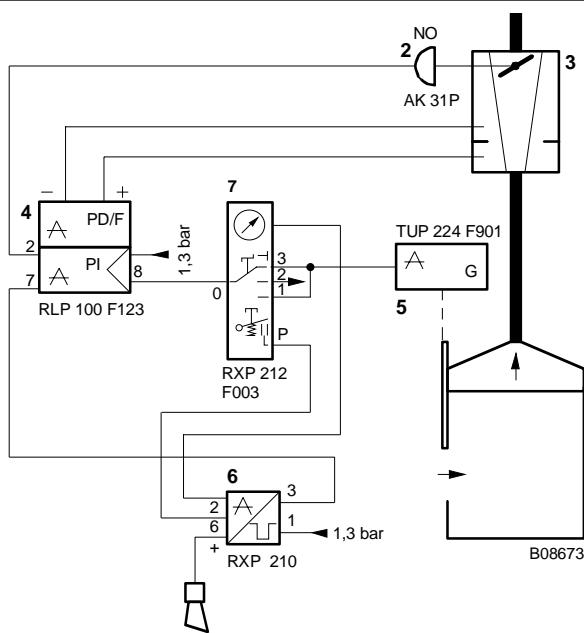

Right of amendment reserved  
N.B.: A comma between cardinal  
numbers denotes a decimal point  
© Fr. Sauter AG, CH-4016 Basle  
7167535003 05